



SEPARATING THE UV LAMP FROM THE CARTRIDGE FOR DISPOSAL (MODEL 100186)

The internal UV lamp can be separated from the cartridge for disposal.

Note: You will need a small screwdriver or tool with a thin small flat edge.

1. Insert the flat end of the tool into one of the notches to pry off the cap (Fig. 1).
2. Insert the flat end of the tool between the inside edge of the neck of the cartridge and the top of UV lamp (Fig. 2).
3. Pry up the UV lamp (Fig. 3).
4. Carefully remove the UV lamp by pulling straight up (Fig. 4).
5. Dispose of all components in accordance with local requirements.

